


3-PAD SYSTEM INSTALLATION INSTRUCTIONS

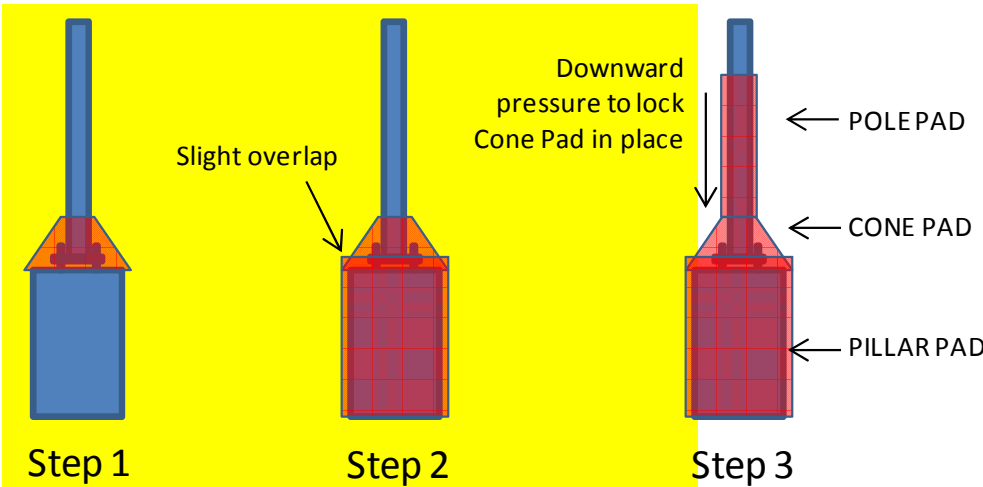


ORDER OF PAD INSTALLATION

- Cone Pad
- Pillar Pad
- Pole Pad

1. Install the Cone Pad. Ensure the Cone Pad is not reversed. Position it where it can provide the most protection possible.

The cone pad's mitered sections should meet in a smooth manner, not gapped where the sections meet. If it is gapped, the cone pad is reversed.

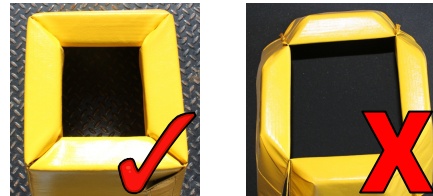

2. Install the Pillar Pad. It is designed to overlap the bottom of the Cone Pad by 1–2 inches.

3. The Pole Pad should be butted against the top of the cone pad, not tucked under it. Apply slight downward pressure on the Cone Pad with the positioning of the Pole Pad. This will hold the entire system in place long-term..



Cone Pad is reversed

**A PROPERLY INSTALLED PAD IS AN
ATTRACTIVE SAFETY MEASURE !**

www.wepadit.com

2135 SW 19th Street, Oklahoma City, OK 73108

